

# **QCamera User Manual**

## **For MAC OS**

Information in this manual is subject to change without notice

# Software Operation

 
The software consists of two parts:

















- Camera Display Area
- Toolbar










## 1. Camera Display Area

Default Document Camera 1) display area that shows images and videos.2) editing area where annotation can be freely made such as text, lines and geometrical figures.

## 2. Toolbar



Icon	Menu	Description	
	<b>About</b>		Check software version and related QOMO information
	<b>Language</b>		Set Chinese/English
	<b>Exit</b>		Exit software
	<b>Minimize</b>	Minimize the software	
	<b>Move</b>	Switch selection after using annotation and eraser	
	<b>Annotate</b>	Select annotation color and thickness	
	<b>Eraser</b>		Erase annotation
	<b>Clear</b>		Clean annotation
	<b>Full Screen Capture</b>		Capture full screen image
	<b>Region Capture</b>		Capture partial region
	<b>Photograph</b>	Take photo and mark	
	<b>Record Screen</b>		Record the whole screen image


	<b>Record Camera</b>		Record the showing of camera
	<b>Zoom In/Out</b>		Zoom In/Out
	<b>Freeze</b>		Freeze the image showing
	<b>Rotation</b>		0°/90°/180°/270°rotation
	<b>Mirror</b>		Mirror image
	<b>Adjust</b>		Adjust the brightness,contrast, saturation,auto focus and focal length
	<b>Camera</b>		Choose camera model and resolution
	<b>View files</b>		Show the capture, picture and video or open local files
	<b>Split</b>		Split the screen in two vertical parts for comparing live image with local picture

Note:

 
1. Recording, zoom,freeze,rotate,mirror, adjust, split are only available when document camera is connected.
2. In the status of freeze, zoom,rotate, mirror and adjust, live video is not available.

### 3. Main function introduction:


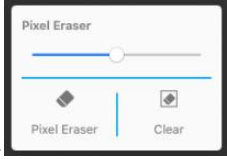


#### 3.1 Annotate

By clicking  to annotate in the live image. select the pen thickness and color,

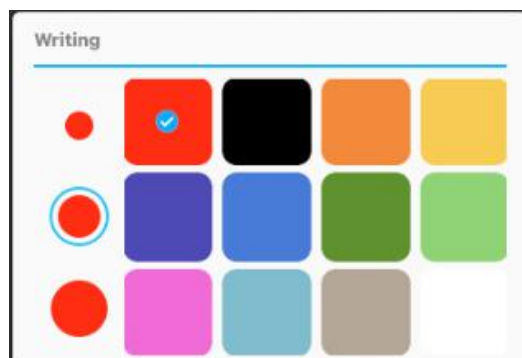
The default color is red.






### 3.2 Pixel Eraser

Click  →  → , you can erase the annotation. Move the Horizontal bar to adjust eraser size. Select , All the annotation will be cleared.

### 3.3 Capture


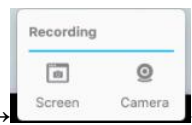

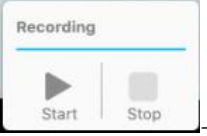


By clicking , you can capture fully or partially capture screen.

Full screen capture: Click , the full screen will be captured, and saved in local catalog.

Region capture: Click , to capture region, click  to save the capture.




### 3.4 Record

Click  →  →  →  →  to start recording video(select recording screen or camera image). On the left corner there will be a window  to show recording time, suspend or stop recording. The video


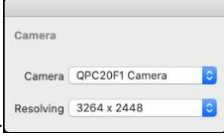
will be saved in local catalog of Video. You can open it through view files.

*Note: The suspending will be not available when recording camera image.*

### 3.5 Freeze

Click , the image will be frozen when the icon become blue. Click it again to resume.

### 3.6 Camera

Click  → , choose appropriate camera and resolution.

*Note:* Normally, the software will detect model and best resolution automatically.

## Troubleshooting

Tips for using the Document Camera:

Troubles	Cause	Solution
<b>No image</b>	Poor connection	Check if the white USB power Cable is connected and the light on Camera Head shows red.
<b>Poor focus</b>	1). Not enough light or too much light 2). Object beyond focus 3).Unclean camera glass	1). Turn on/off Lamp Light and rotate Lamp Button to adjust brightness 2). Use cloth to clean the Camera glass.
<b>No video shown after application starts or after the device is selected</b>	Document Camera is being used in another program	Re-connect the USB and choose the device
	BUG	Restart software
<b>Video is not smooth</b>	Computer configuration might be low	Change the Camera to lower definition
<b>Blur image</b>	Focus is in manual mode	Change to auto mode in the Focus Menu